 


# Mi·Light<sup>®</sup>

## User Instruction

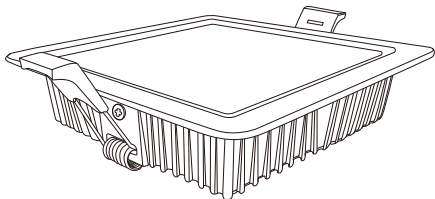

**RGB+CCT Square LED Downlight**  
Model No.: FUT064

# Features



RGB+CCT  
16 Millions of colors to choose



Color temperature  
2700~6500K



Dimmable  
Saturation control



2.4GHz  
Radio Frequency



Remote control  
Control distance 30m



Smart phone App control  
Mi-Light WiFi iBox is needed



iOS



ANDROID



2.4G



WiFi

# Parameters

Model No.: FUT064

Power: 9W

CRI: >80

PF: >0.5

Beam Angle: 120°

Hole Size: 105\*105mm

Material: Aluminum

Input Voltage: AC86~265V / 50~60Hz

 
Color Temperature: 2700K~6500K

Luminous Flux: 720LM

Light Efficiency: 80LM/W

Lifespan: 50000 hours





Control Distance: 30m

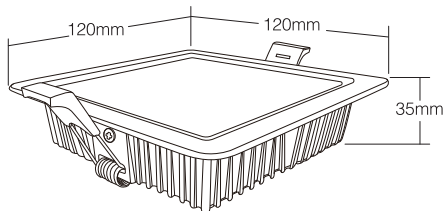

# Installation

- 1). Please open the hole on the ceiling according to the correct size of Diagram 1.

    - 2). Connect the driver properly according to the wire connection Diagram 2. (**Please ensure the power is not connected when you install the downlight**).
- 3). put the driver and wire into the ceiling from the hole.
- 4). Push in the two spring elements, make sure that they are deployed and anchored on the back of the ceiling.

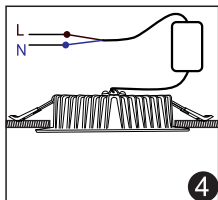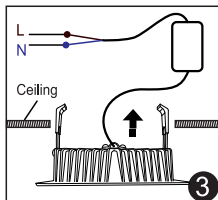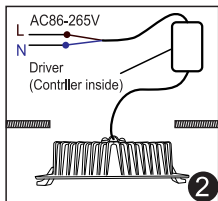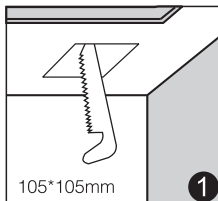

# Link/Unlink

Compatible with these remote controls (Purchased separately)



FUT089



FUT092



FUT095



FUT096



B8



B3 / T3



B4 / T4



Lighting can be working after linking with remote;  
for more details, pls read the remote instruction.

# Caution

- 1). To reduce the risk of electric shock, please ensure the power is not connected when you install the downlight.
- 2). Notice! Amateurs do not disassemble or install the lamps. If the light is damaged, please seek professional electrical assistance, or please discard the light .
- 3). Lamp installation must be correct and strict, solid and reliable, avoid long time using in violent vibration place.
- 4). The lamps send out normal quantity of heat during working. Please don't use any cover to cover the body of the lamps.



Made in China